



energía
CONNEXIÓ

WIFI ROUTER 813G/844G/836GE

01 Abrir el navegador (Chrome, Firefox, Internet Explorer, Safari...) y en la barra de direcciones escribe la siguiente dirección IP: **192.168.1.1**
Te aparecerá la siguiente pantalla para que te **identifiques**:


Residential Gateway

User Name:

Password:

Login

User Name: admin
Password: se encuentra en una de las etiquetas de tu router (numeración de 8 dígitos). Como se muestra a continuación.

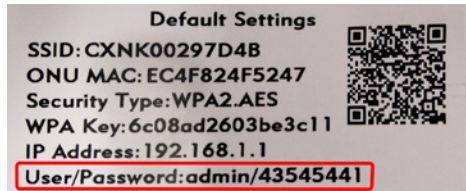

02 Una vez introducidas tus credenciales clicas en Login y te aparecerá la siguiente pantalla:
Debes clicar en *Wireless* (naranja) para entrar en la configuración del wifi.



03 Para cambiar el **nombre del wifi** clicas en *2.4G Network>SSID Setup* y en *Rename SSID* pones el nombre que quieras y clicas en *Apply* para guardar los cambios.

Status Quick Start **Wireless** Utilities Advanced Support

Wireless

- 2.4G Network
- Radio Setup
- SSID Setup**
- Security
- MAC Authentication
- WMM
- Advanced Radio Setup
- WPS

Service Set Identifier (SSID)

Service Set Identifier (SSID) is used to identify this gateway device for connection to other wireless devices. The SSID may be broadcast to publish its value to aid in connecting this device to other wireless devices or it may be hidden to prevent unauthorized access. The factory-defined SSID values may be redefined to a user-specified name.

SSID (Network Name):

SSID State: Enabled Disabled

Broadcast SSID: Enabled Disabled

Rename SSID:

Apply



energia
CONNEXIÓ

WIFI ROUTER 813G/844G/836GE

- 04** Para **cambiar la contraseña del wifi** clicas en **2.4G Network>Security** y activa **Use Custom Security Key**, pones la contraseña que quieras y clicas en **Apply** para guardar los cambios.

The screenshot shows the 'Security' configuration page in the router's web interface. The 'Wireless' menu is open, and 'Security' is selected. The page title is 'Security' and it includes the instruction: 'Secure your wireless traffic as it transmits through the air.' The configuration fields are: SSID (Network Name): CXNK004F8BF8; Security type: WPA2-Personal; Encryption type: AES; Security Key / Passphrase: Use Default Security Key (34e61f47d1b5ac30) is selected, and Use Custom Security Key (1234567890) is unselected. An 'Apply' button is at the bottom.

- 05** Si quieres cambiar el canal wifi: **Wireless > 2.4G Network > Radio Setup** El **Channel** está en Auto, debes poner el Canal que quieras.

Puedes guiarte por alguna aplicación de analizador del wifi para saber el mejor canal.

Se recomienda revisarlo en los casos en que co-existen varias redes wifi que pueden crear interferencias entre sí, como por ejemplo, en comunidades de pisos.

The screenshot shows the 'Radio Setup' configuration page in the router's web interface. The 'Wireless' menu is open, and 'Radio Setup' is selected. The page title is 'Radio Setup' and it includes the instruction: 'Radio Setup provides the ability to customize the wireless radio for your specific network needs.' The configuration fields are: Wireless Radio: On is selected, Off is unselected; Mode: 802.11b, 802.11g, and 802.11n; Bandwidth: 20 MHz; Channel: Auto; Power Level: 100%; Airtime Fairness: unselected; Frame Burst: selected; PMF: unselected. An 'Apply' button is at the bottom.